

Gainscha Network Inc.



Remove the transfer plate cutter

操作步驟

User Guide

By Allen, January 17,2022

www.gainscha.com.tw


Removing instructions

一. Removing needs:

1. Phillips screwdriver
2. Industrial machine

二. Disassembly process:


1. Remove the two screws of the printer cutter.

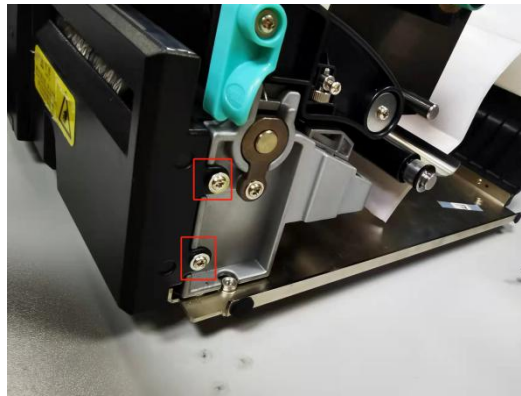

2. Remove the cutter line end.




3. Remove the printer side housing screws.

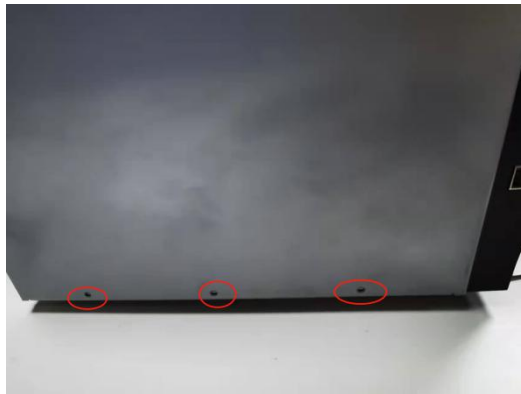

4. Remove the printer cover screws.



5. Remove the printer side baffle and the hood.

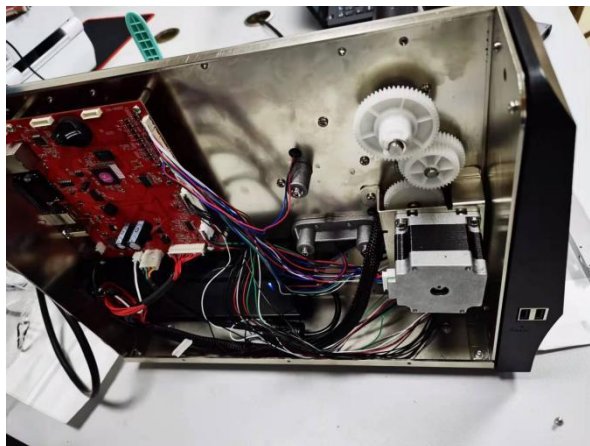


6. Remove the push-button plastic housing screws.




7. Open the plastic shell and remove the screws of the red transfer plate.




8. Unplug the blue cable end port on the printer mainboard.

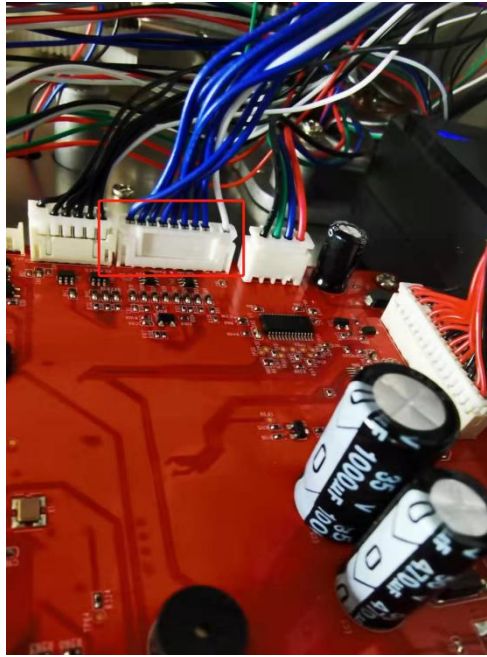


9. Pull off the other end of the black line end of the red transfer plate.

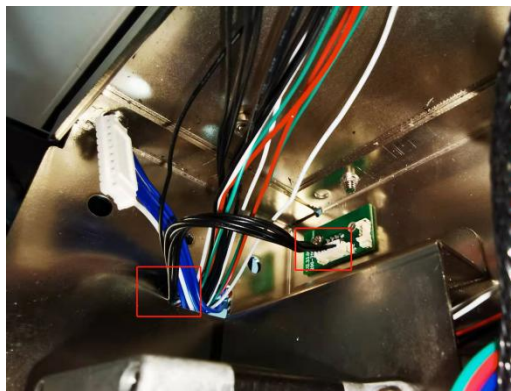


10. Remove the green transfer plate screws.

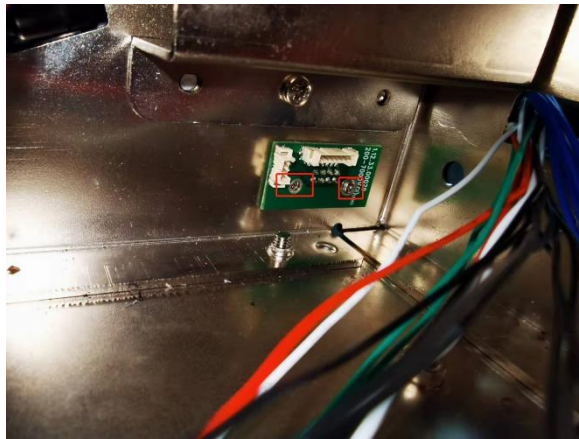


11. Remove the red transfer plate and install the screws.

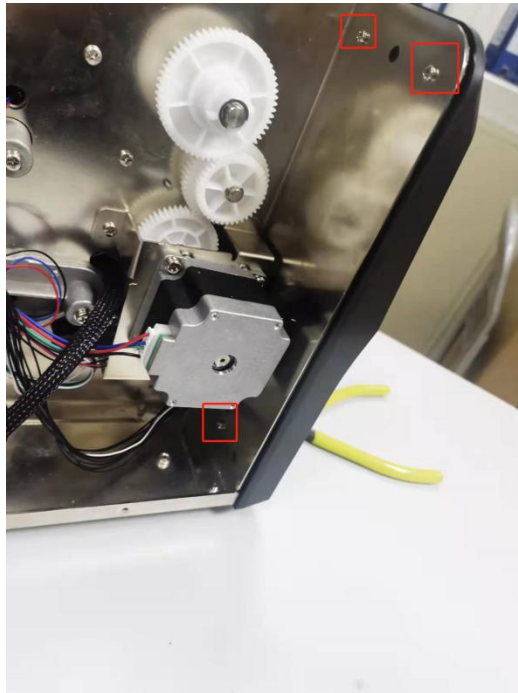


12. Pass the label sensor through the wire hole.

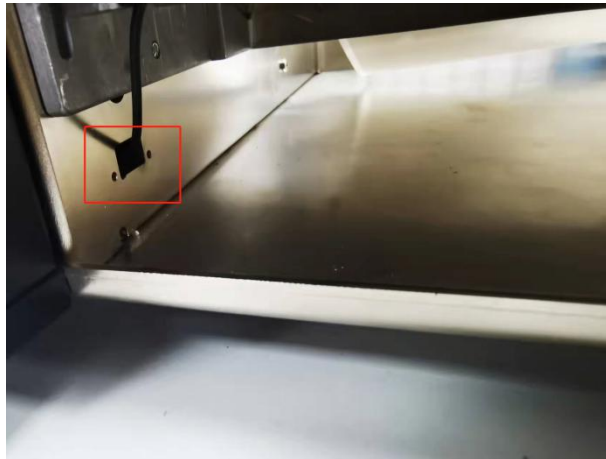

13. Insert the tag sensor line end into the line port.

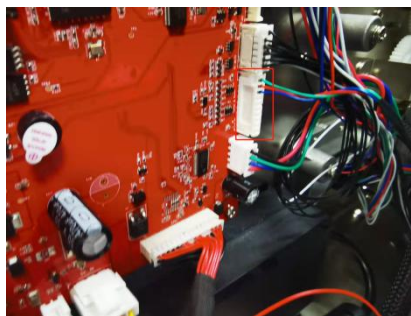

14. Install the label sensor with the fixing plate with the screws.

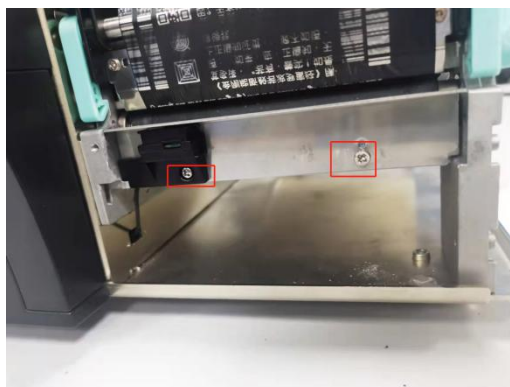

15. Install the slide cover.




16. Install the front baffle and two screws.




17. Install the baffle from top to bottom and card into the groove.



18. Install the side baffle screws.

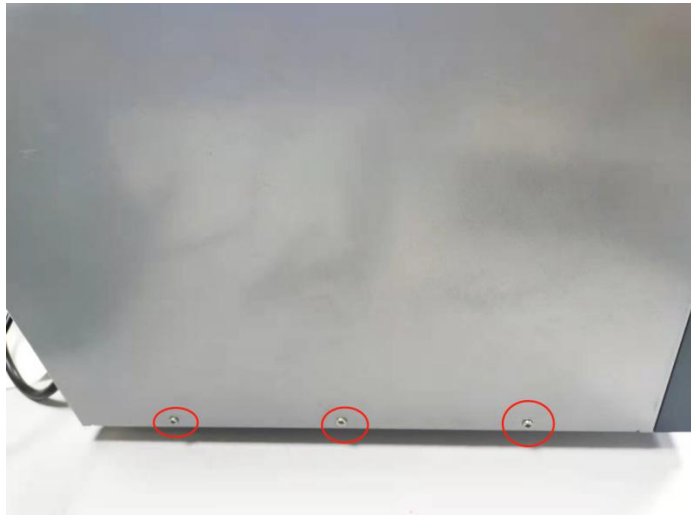

19. Put the Printer screw hole in the corresponding position, and install the screws.

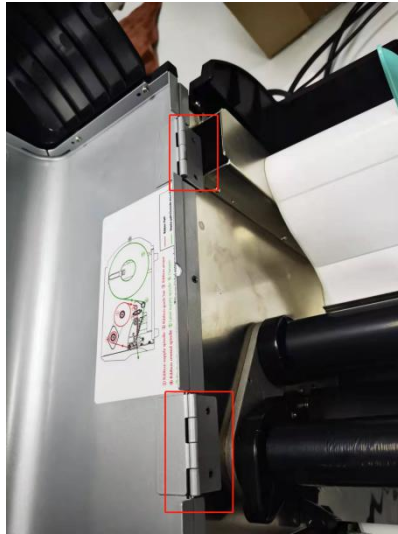

21. Remove the operation instructions of the transfer plate and the cutting knife. Thank you!