



APEX Splitter installation

操作说明

User Guide

By Allen, January 17,2022


Removing instructions

一. Removing needs:

1. Apex printer
- 2.Screwdriver
- 3.detacher

二. Installation process:

1. Remove the two screws for the front-end baffle of the printer :

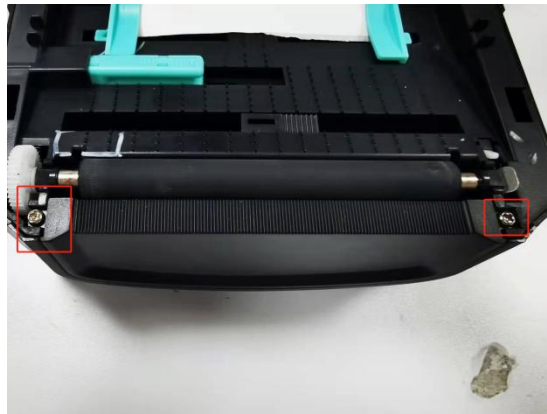


2. Lift the baffle up, and remove it:




3. Plug the line of the stripper into the line port as shown below:



4. Remove the rear housing screws.

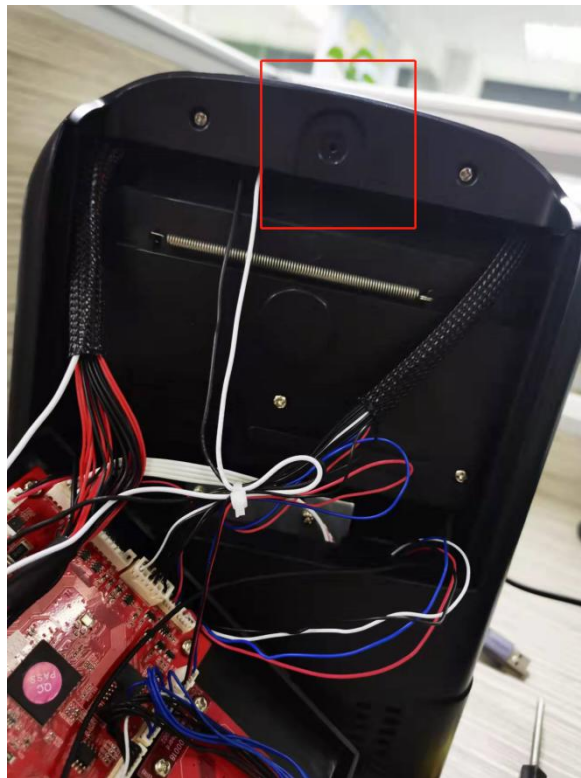

5. Find the wire connector for the stripper and insert the "**Number 1 mark position**" in the figure below:

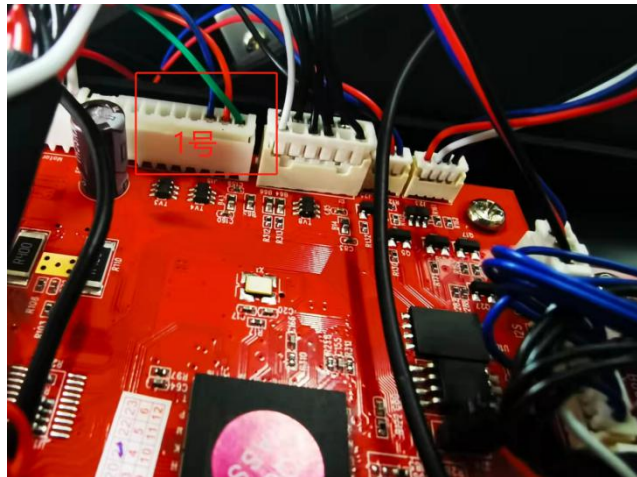


6. Install the rear housing of the printer motherboard to place the small bumps under the housing in the groove:



7. Hands hold the drawing circle in the picture, to the "arrow" direction of the rear bottom shell to hear a crisp sound after installing the bottom shell screw of the mouth on the figure below:



8. Card the bump of the stripper into the groove as shown below:

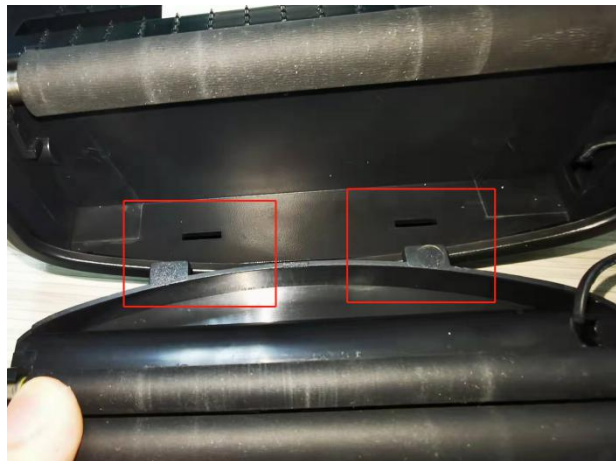

9. The screw hole of the stripper is stuck into the card slot, press the drawing circle in the picture inside, hear the "card" and install the stripper screw in the figure below:



10. Open the stripper and pass the label bottom paper through the stripper as shown in the figure below:



Note: (Always tear through the label through the stripper)


11. Turn off the stripping, cover the printer cover, and power the USB to the computer. Open Control Panel —> Device & Printer —> Find the corresponding printer model Right-click —> Select Print Preferences in the figure below:



12. Select roll in the following figure:



13. Click Post-Print Action — — > to select Strip and determine the figure below:

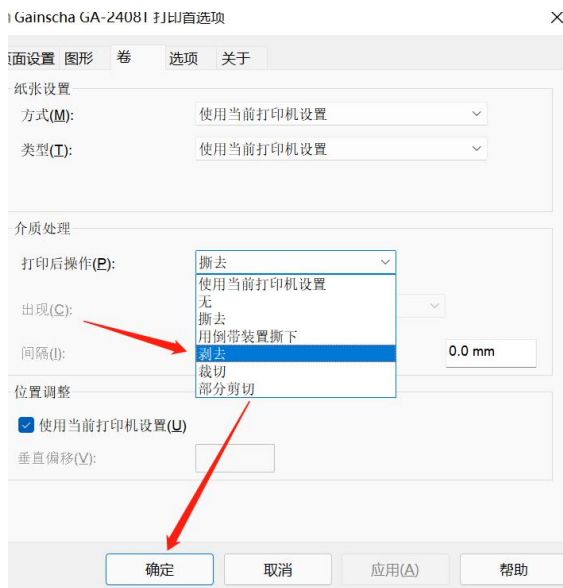

14. Check that the stripper is successfully installed. Open the BarTender for printing. See if the printer has a stripping action.