

Gainscha Network Inc.



APEX printhead replacement

操作说明

User Guide

By Allen, January 17,2022


www.gainscha.com.tw

一. Replacement needs:


1. Apex printer.
2. print head.
3. (tweezers)
4. Phillips screwdriver.

二. Replacement process:


1. Remove the carbon belt shaft.

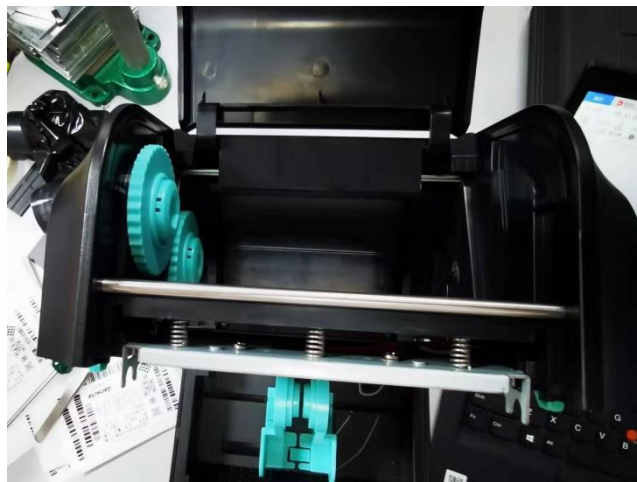


2. Pull the spring outward with tweezers.

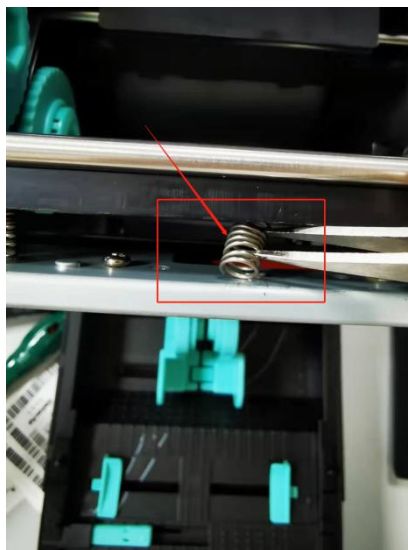


3.Remove the remaining spring.

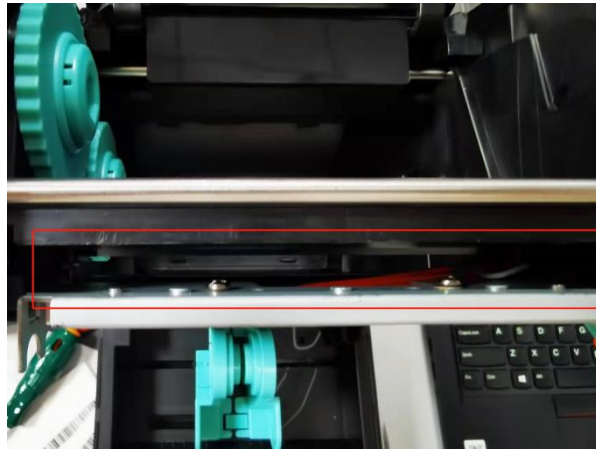


4.Press the pointing arrow and remove the print head.

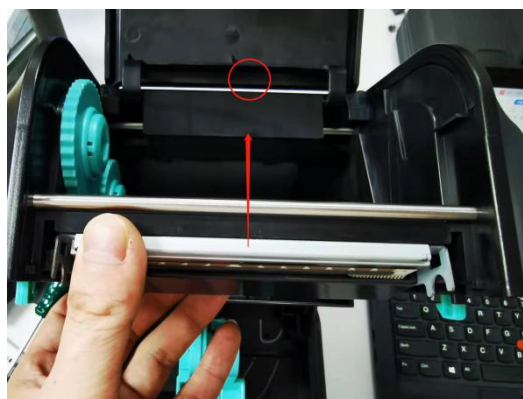


5.Remove screws:

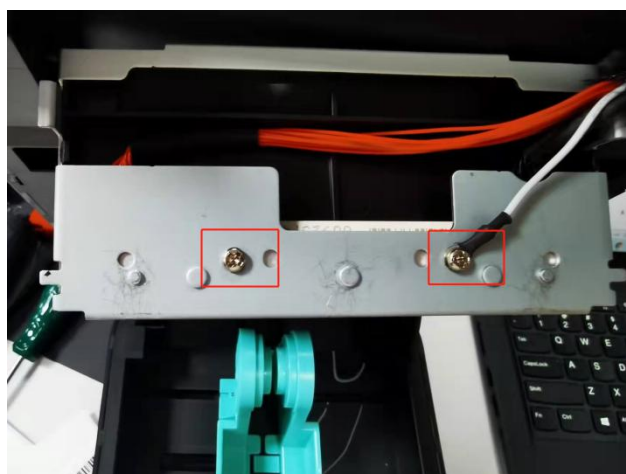

6.Pull off the connecting cable:

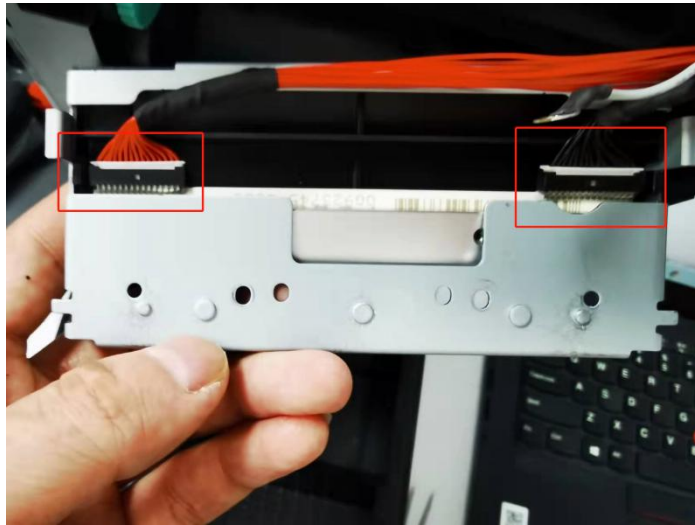

7. Install the print head: put the print head in the thermal bracket, pay attention to the front and back of the print head, and connect the print head online:

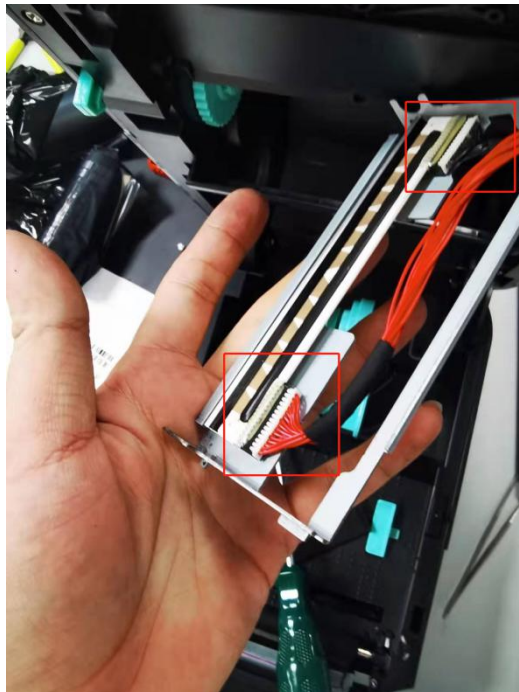


8. Close the cover plate and the bracket



9. Install two fixed screws on the print head (note: the right screw must be plugged with a white coil gasket):




10.The thermal support shall be stuck in place:

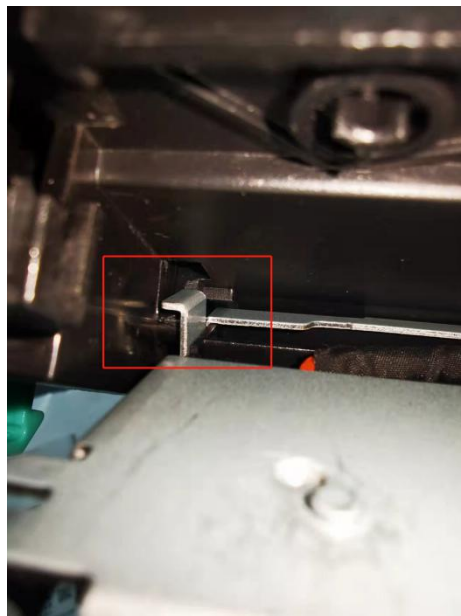


11.The bumps on the bracket must be stuck in

place:

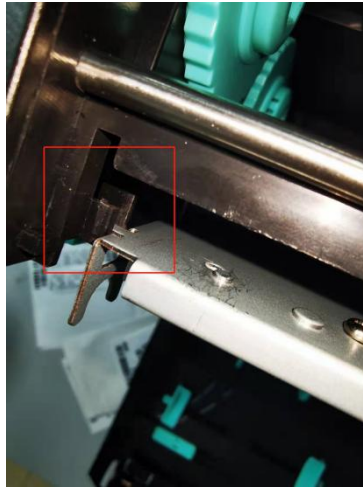

12. Hold the spring with tweezers (up to two laps) first, put the spring in the upper end of the printer, and then put the hand or tweezers in the buckle

below:

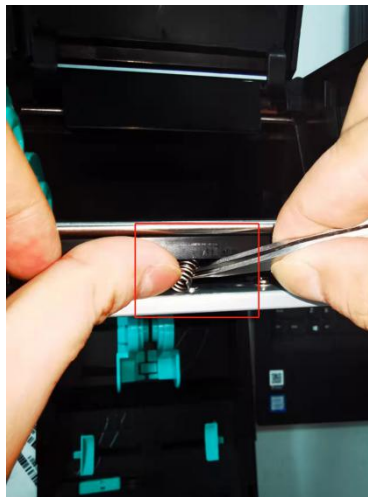

13. Install the other two screws to the spring in the same way.

14. Verify that the print head is installed successfully: Connect to the computer to print.

15.End of the print head replacement operation instructions.