



Drive installation and removal

操作步驟

User Guide

By Allen, January 17,2022

www.gainscha.com.tw

一. Removing the printer drive:


1. Download "Gprinter" on the official website.
2. Open "Gprinter" - "I agree" - "next page" - "complete"



3. Select Delete a Printer



4. Select Delete Printer- -Next page again

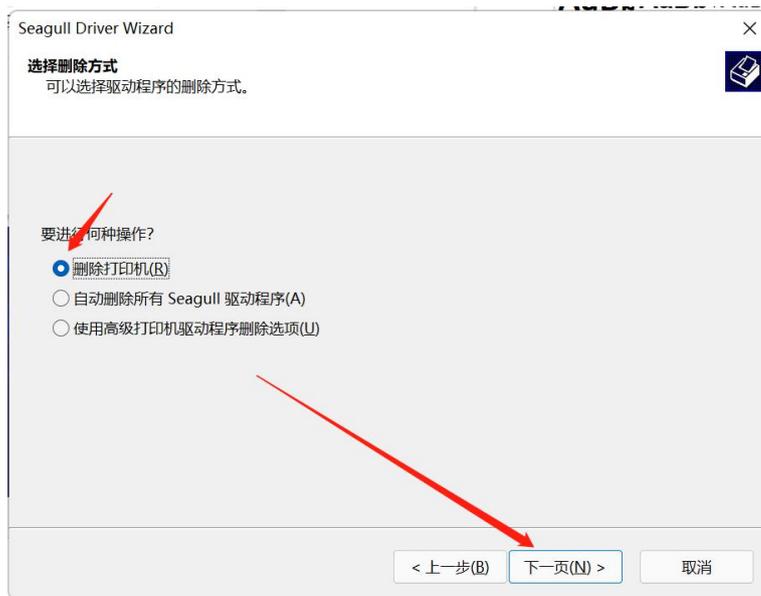

5. Select the printer driver that needs to be deleted. (if there are other unpublished documents in the printer, delete the file first.) Click Next- - -Finish



二. Install the printed driver:

1. Open the software "Gprinter" and select "I agree" - - - -
"Next page" - - - - "Finish"




2. Select Install- - - - -Next



3. Select the printer connection mode (generally through the USB connection. If the USB cannot identify it, please select "Other connection" and click Next.)



4. Select the installed printer model- - - - "Next page"

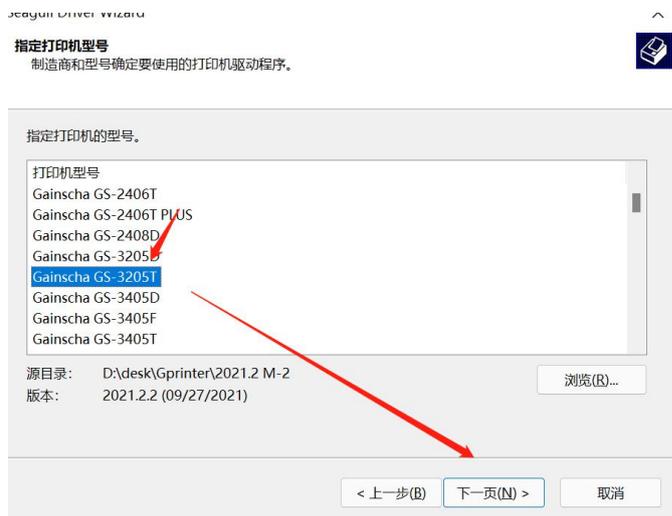

5. Select the port of the printer (download "PrinterUtility" to read the printer information).----- "Next page" - - - - - "Complete page"



6. Click Finish. The printer driver is being installed.